



MC40


QUICK START GUIDE

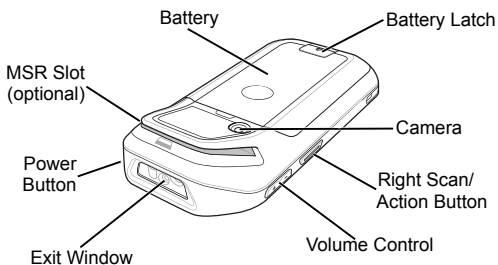

Features

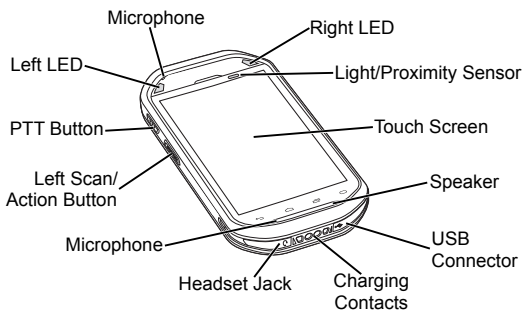


Battery Installation

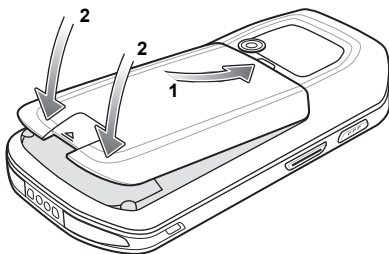

Charge the MC40

1. Insert the MC40 into the optional Single Slot Charging cradle accessory.

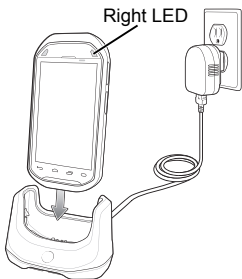


2. The MC40 starts to charge automatically. The MC40 charges in approximately four hours.

Right LED State	Description
Slow Flashing Amber	MC40 is charging.
Solid Green	MC40 is fully charged.
Fast Flashing Amber	Charging error.
Off	Not charging.


Scanning

To scan bar codes:

1. Open an application and ensure that a text field is in-focus.
2. Press the scan button and aim the exit window at a bar code.

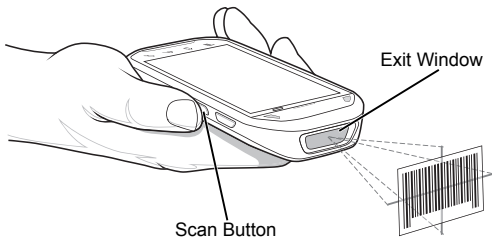

Get More Information

For more information on using the MC40, refer to the **MC40 User Guide** application on the MC40. Touch  > **MC40 User Guide** to open the guide.

Also go to <http://www.zebra.com/support> to view the *MC40 User Guide* and *MC40 Integrator Guide*.

Zebra reserves the right to make changes to any product to improve reliability, function, or design.

Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Zebra products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Zebra products.



Zebra Technologies Corporation
Lincolnshire, IL U.S.A.
<http://www.zebra.com>

Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.
© 2015 Symbol Technologies Inc.



72-167493-02 Revision A - January 2015